


Rain Gauge Mounting Post Building Plans

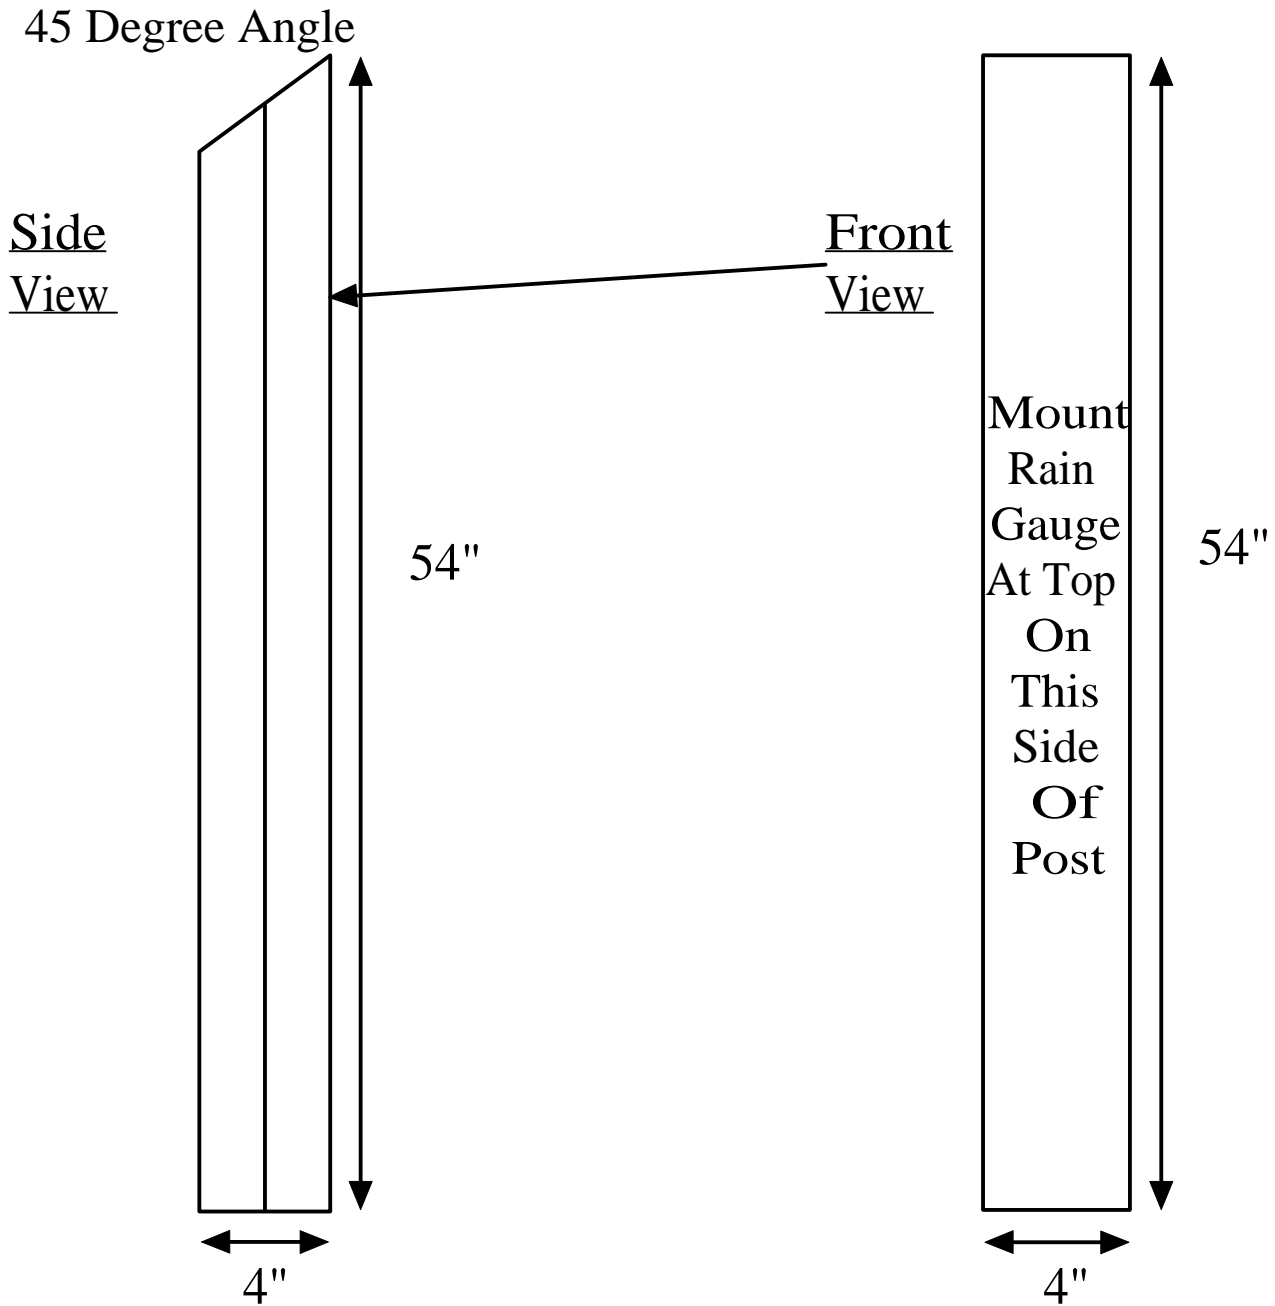

You Will Need:

2 Each 2 X 4's At 54" Long
Or 1 Each 4 X 4 At 54" Long

Approximately 6 Each 3" Long Wood Screws
(If Using 2 Each 2 X 4's Use Screws To Attach Them
Together As Shown Above)

Mark Line At 16" From Bottom Of Post And Bury
In Ground To This Line.

